CONGRATULATIONS

Congratulations on the purchase of your Whirlpool dishwasher, I am confident that this product will provide you with the same quality, performance and reliability on which our reputation has been built.

Please take the time to read this instruction book. It's full of valuable ideas and information that will help you enjoy this product for many years to come.

Thank you for choosing one of our quality products. You have made an excellent choice.

Sincerely,

Karim Lalani

General Manager

Sales and Marketing

Inglis Limited

E SUMMARY

DISHWASHER SAFETY	PAGE 14
A NOTE TO YOU	PAGE 15
STARTING YOUR DISHWASHER	PAGE 16
REQUESTING ASSISTANCE OR SERVICE	PAGE 16
BEFORE USING THE DISHWASHER	PAGE 17
PROTECTING THE ENVIRONMENT	PAGE 17
GENERAL RECOMMENDATIONS	PAGE 17
ENERGY AND WATER SAVING TIPS	PAGE 17
HOW TO FILL THE RINSE AID DISPENSER	PAGE 18
HOW TO FILL THE DETERGENT DISPENSER	PAGE 19
MAINTENANCE AND CLEANING	PAGE 20
DISHWASHER WARRANTY	PAGE 21

For maximum satisfaction from your dishwasher, carefully read these user instructions and consult the wash programme chart.

DISHWASHER SAFETY

Your safety and the safety of others is very important

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is a safety alert symbol.
This symbol alerts you to hazards that can kill or hurt you and others.
All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING". The words mean:

⚠DANGER — **You will be killed or seriously injured if you don't follow instructions.**

⚠WARNING — **You can be killed or seriously injured if you don't follow instructions.**

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using the dishwasher, follow basic precautions including the following:

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Use only detergents or rinse agents recommended for use in a dishwasher and keep them out of the reach of children.
- When loading items to be washed:
  1. Locate sharp items so that they are not likely to damage the door seal;
  2. Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- Do not wash plastic items unless they are marked "Dishwasher safe" or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.
- Do not operate the dishwasher unless all enclosure panels are properly in place.
- Do not tamper with controls.
- Do not abuse, sit on, or stand on the door or dish racks of the dishwasher.
- To reduce the risk of injury, do not allow children to play in or on the dishwasher.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the dishwasher, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.
- The lower rack is tethered and cannot be removed.

SAVE THESE INSTRUCTIONS

A NOTE TO YOU

Thank you for buying a Whirlpool appliance.

To ensure you enjoy years of trouble-free operation, we developed this Instructions for Use Manual. It contains valuable information about how to operate and maintain your appliance properly and safely. Please read it carefully. Also, please complete and mail the Product Registration Card provided with your appliance. This cards helps us notify you about any new information on your appliance.

Please record your model's information.

Whenever you call to request service for your appliance, you need to know your complete model number and serial number. You can find this information on the model and serial number label. Please also record the purchase date of your appliance and your dealer's name, address, and telephone number.

Model Number:
Serial Number:
Purchase Date:
Dealer Name:
Dealer Address:
Dealer Telephone:

Keep this book and the sales slip together in a safe place for future reference.

Help us help you

Please:

- Have you dishwasher installed by a qualified installer.
- Install where dishwasher is protected from the elements.
- Install and level dishwasher on a floor that will hold the weight, and in an area suitable for its size and use.
- Properly connect dishwasher to electricity, water and drain. (see Installation Instructions for complete information):
- Remove all shipping plugs from hoses and connectors before installing.
- Remove all hang tags and temporary labels.
- Make sure dishwasher is not used by anyone unable to operate it properly.

Properly maintain dishwasher. See the "Maintenance and Cleaning" section.

STARTING YOUR DISHWASHER

⚠WARNING

Tip Over Hazard
Do not use dishwasher until completely installed.
Do not push down on open door.
Doing so can result in serious injury or cuts.

⚠WARNING

Electrical Shock Hazard
Plug into a grounded 3 prong outlet.
Do not remove ground prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

STARTING YOUR DISHWASHER

GROUNDING INSTRUCTIONS

- For a grounded, cord connected dishwasher:
  The dishwasher must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. The dishwasher is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.
  WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock.
  Check with a qualified electrician or service representative if you are in doubt whether the dishwasher is properly grounded. Do not modify the plug provided with the dishwasher; if it will not fit the outlet, have a proper outlet installed by a qualified technician.
- For a permanently connected dishwasher:
  The dishwasher must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the dishwasher.

- SAVE THESE INSTRUCTIONS -

REQUESTING ASSISTANCE OR SERVICE

Before calling for assistance or service, please check the "Troubleshooting" section. It may save you the cost of a service call. If you still need help, follow the instructions below. If you need assistance or service in Canada:

1. **If the problem is not due to one of the items listed in "Troubleshooting Guide"*:**
   Contact the dealer from whom you purchased your appliance, or call the Inglis Limited Consumer Interaction Center toll free: 8:30 a.m. - 6 p.m. (EST), at 1-800-461-5681.
   Please include a daytime phone number in your correspondence.
2. **If you need service:**
   Contact your nearest Inglis Limited Appliance Service branch or authorized servicing outlet by calling 1-800-807-6777 for appliance service.
   * When asking for help or service: Please provide a detailed description of the problem, your appliance's complete model and serial numbers, and the purchase date. (See the "A Note to You" section.) This information will help us respond properly to your request.

Also see section "Further Assistance".

BEFORE USING THE DISHWASHER

- After unpacking, make sure the appliance is undamaged and that the door closes correctly. Do not use the appliance if it is damaged. If in doubt, consult your local retailer.
- This appliance is designed for use in the home in compliance with its intended purpose.

PROTECTING THE ENVIRONMENT

1. **Packing**
   The packing box may be fully recycled as confirmed by the recycling symbol ♺.

2. **Appliance**
   The appliance is built from reusable materials.
   If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cord so that the appliance cannot be reconnected.

GENERAL RECOMMENDATIONS

General recommendations

- Only use detergents and rinse aids specially recommended for use in domestic dishwashers.
- Load capacity: 12 place settings.

ENERGY AND WATER SAVING TIPS

- Do not rinse dishes under running water.
- Always fully load the dishwasher before switching on or set the wash programme to **half load** (if available) if one rack only is loaded.

HOW TO FILL THE RINSE AID DISPENSER

The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on dishes. Before using the dishwasher for the first time, fill the rinse aid dispenser. Thereafter, regularly check the rinse aid level.

Only use rinse aids recommended for use in domestic dishwashers.

1. Press button **A** (see drawing) to open the rinse aid cover. Fill the dispenser with rinse aid up to the dashed line marked **MAX** (about 100 ml maximun).
2. **Immediately wipe away any spilled rinse aid to prevent excess suds which may spoil washing results.**
3. Swing the rinse aid cover closed and latch it under button **A**.

How to adjust the rinse aid dosage regulator.

(Open the cover and close again following adjustment).

Factory setting: 4.

If you are not satisfied with washing or drying results, change the dial setting with a spoon handle or coin.
If dishes are prone to whitish streaks, reduce the dosage by turning the dial to a lower setting. If instead dishes are wet, increase the dosage by turning the dial to a higher setting.

Rinse aid level indicator (visual or electric indicator depending on the model installed).

Electric indicator:

The indicator lamp ☼ on the control panel illuminates when the rinse aid dispenser is empty.

Visual indicator:

The visual rinse aid indicator is the clear plastic indicator rod which protrudes through the rinse aid cover.
Light = empty
Dark = full

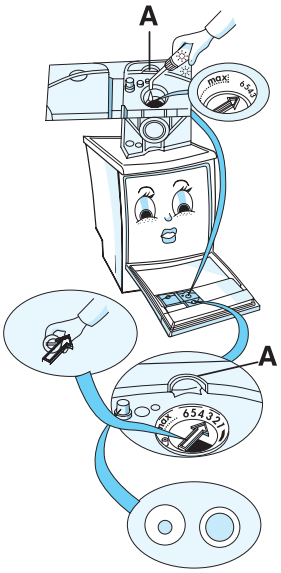

HOW TO FILL THE DETERGENT DISPENSER

Only use detergents recommended for use in domestic dishwashers.

If you use "new generation" enzyme-based detergents, select the Bio cycles which are also suitable for all normal detergents.

If you use detergents in pellet form, follow the manufacturer's directions for use.

Always use the recommended dosage stated on the detergent pack. The use of detergent in excess of the recommended dosage may cause pollution. The recommended dosage varies between different brands.

The figures inside the large compartment serve as a dosage guide.
The figures are in "ml" or "cm^3".

Only fill the detergent dispenser prior to starting a wash cycle.

Normal load:

For cycles with pre-wash.
(Example: Normal 50°C, refer to the "Wash cycle chart").

First fill the large compartment.
Then fill the small compartment.

1. Pour two thirds of the recommended dosage in the large compartment.
2. Pour the remaining third in the small compartment.
   Note: Remember to close the large compartment lid.

Large compartment volume: 45 ml (up to rim).
Small compartment volume: 10 ml (up to rim).

For cycles without pre-wash:

- Pour the entire recommended dosage in the large compartment. If the recommended dosage on the detergent pack is over 45 ml, pour the remaining detergent in the small compartment.

For cycles with additional selected functions:

"Half load": if your machine has the half load option selector, load the lower rack only and use a smaller quantity of detergent.

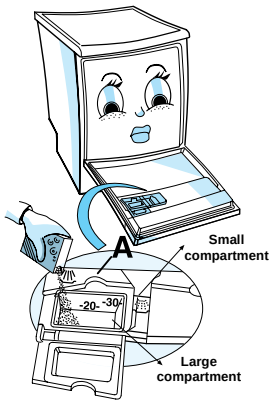

MAINTENANCE AND CLEANING

Before carrying out any cleaning or maintenance, turn the cycle selector switch to OFF position.

1. Clean the appliance exterior with a neutral detergent. Do not use abrasive detergents.
2. Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residues.

If the spray nozzles become clogged with food residues, clean the spray arms as follows:

Middle spray arm (rack mounted):

- Slacken the fixing nut by turning it counter-clockwise **A** and detach the spray arm by pulling it down **B**.
- Rinse the nozzles.
- Remount the spray arm by aligning it with the rotary mounting and insert it.
- Tighten the fixing nut by turning it clockwise. Make sure the nut is fully tightened (it should click).
  Make sure the spray arm rotates freely.

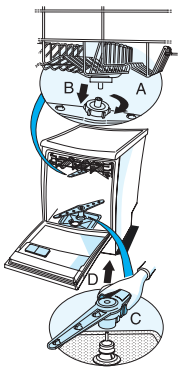

Lower spray arm (floor mounted):

- Press inward on the two levels **C** that hold the spray arm and detach the spray arm by pulling it straight up **D**.
- Rinse the nozzles.
- Remount the spray arm by inserting it over the rotor pin.
- Push the spray arm down until it is fixed in place.
- Make sure the two levers are correctly inserted (they should click).
  Make sure the spray arm rotates freely.

Cleaning the filters

1. Fully unscrew the wide-mesh central filter by turning it counter-clockwise and extract it **E**.
2. Fully unscrew the cylindrical filter and extract it from the wide-mesh central filter **F** (pay due attention to the holes in the bottom of the filter).
3. Remove the large fine-mesh filter screen **G** from the dishwasher floor being careful that it does not bend or twist. If it is bend, it will not seal properly when reinstalled.
4. Clean all the components.
5. Reassemble:
   Replace the large fine mesh filter screen into the recesses in the dishwasher floor. Reassemble the cylindrical central filter components and install them into the hole in the dishwasher floor. Screw down the central filter components by turning the assembly clockwise. All filters must be correctly assembled and installed to ensure good washing results.

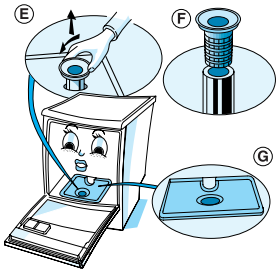

DISHWASHER WARRANTY

Length of Warranty - We will pay for:

Full One Year Warranty from Date of Purchase:	**FSP replacement parts and repair labour to correct defects in materials or workmanship. Service must be provided by a Whirlpool designated service company.**
Limited Two Year from Date of Purchase.	**FSP replacement parts for the wash pump and motor if defective in materials or workmanship.**
Limited Five Year from Date of Purchase:	**FSP replacement parts for the electronic control system if defective in materials or workmanship. FSP replacement parts for the top or bottom dish rack if they rust due to defective materials or workmanship.**
Full Twenty Year Warranty from Date of Purchase.	**FSP replacement parts and repair labour for the stainless steel tub or inner door if the tub or inner door develops a water leak caused by rust-through resulting from defective materials or workmanship. Service must be provided by a Whirlpool designated service company.**

We will not pay for:

A) Service Calls to:
- Correct the installation of your dishwasher.
- Instruct you how to use your dishwasher.
- Replace house fuses or correct house wiring or plumbing.

Repairs when your dishwasher is used in other than normal, single-family household use.

B) Pick-up and delivery. This product is designed to be repaired in the home.

C) Damage to your dishwasher caused by accident, misuse, fire, flood, acts of God, or use of products not approved by us.

D) Any labour costs during limited warranties.

E) Repairs to parts or systems caused by unauthorized modifications made to the appliance.

F) In Canada, travel or transportation expenses for customer who reside in remote areas.

This appliance is warranted by Inglis Limited. Under no circumstances shall Inglis be liable under this warranty for incidental or consequential damages.

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

Outside Canada, a different warranty may apply. For details, please contact your authorized Inglis dealer.

If you need Service, first see the “Requesting Assistance or Service” section of this book.

“Whirlpool is a registered trade mark used under license”.